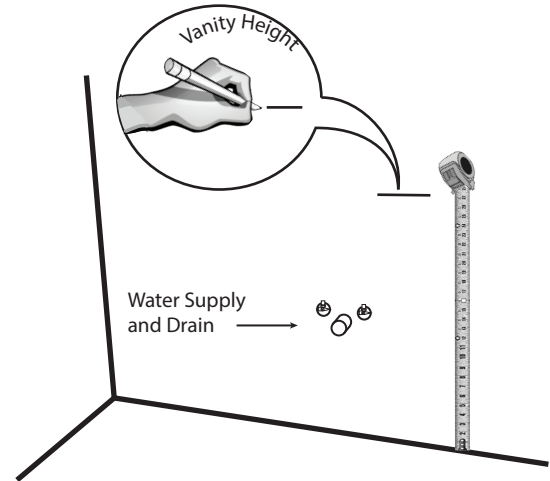


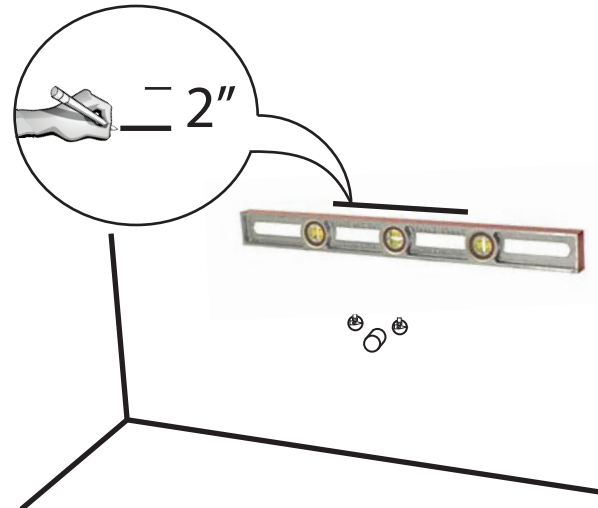

**BEFORE YOU BEGIN PLEASE READ THESE INSTRUCTIONS COMPLETELY:**

- We recommend using the services of a professional installer.
- Two people will be needed for this installation.
- Observe all local building codes.

**STEP 1:** Determine the desired height of your vanity and make a mark on the wall. Existing water supply and drain access locations will play an important part on vanity placement. Seek professional help if you are in doubt of this task.



**STEP 2:** Draw a level line on the wall 2" down from that mark.



**STEP 3:** Cut a 2" notch in the sheetrock to visibly locate the wood studs. While electronic stud finders can locate stud centers, they do not consistently guarantee a precise center point. Visually identifying, marking and drilling the center of the studs will provide better results.

**NOTE:** Do not extend the width of this 2" notch beyond the total width of the cabinet. It will be covered by the cabinet.

